


4-2-4. Adjustment of the head angle

[Adjusting procedure]



- Make adjustment with the head lowered to the bottom position.
- Adjustment with glossy media is recommended.
- Be sure to perform adjustment with the Head cover BKT attached.

- 1) Select [#ADJUSTMENT - HEAD ADJUST - SLANT adjust - 720 4PASS] and then print the adjustment pattern.

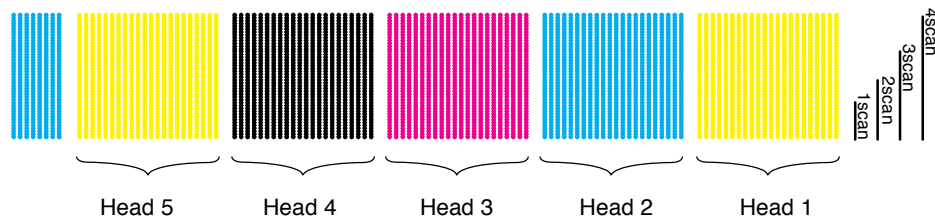


- 2) Check the head tilt with a magnifying glass.
- 3) Loosen two tilt mounting screws, and then turn the tilt adjustment screw according to the tilt direction. As a rough standard, the head tilts 50μm for each screw rotation.

The direction of turn the adjustment screw


Care is required when using a magnifying glass
because of horizontal and vertical inversion.

- 1) Good result

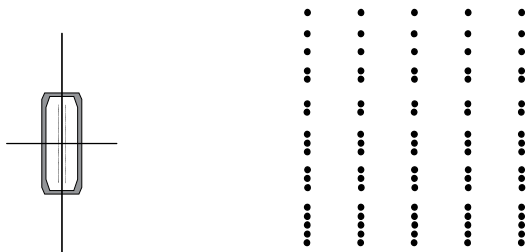

All dots are lined.

2) Bad result (Turn the screw clockwise.)

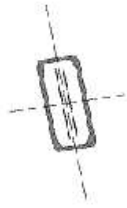

3) Bad result (Turn the screw counterclockwise.)

