



This menu is for checking the motors and sensors of Cap (Up/Down), Wipers and Slider.
 **Make sure to move the head carriage towards left off the capping unit before performing this check. It may damage Head, Cap or Wiper Unit.

Error Displays CAP: Error is found on Capping Motor or Capping Sensor.
 WIPER: Error is found on Wiper Motor or Wiper Sensor.

This is for checking the pump motor.
 The rotation for both ink suction and release can be checked.
 All pump motors rotate for 5 seconds and stop.

CAP: Opens and closes the cap
 Cap must not be left opened for long time when ink is installed. Dried ink may damage Head.
 Option: OPEN/CLOSE Default: OPEN
 WIPER: Moves the wiper towards front and rear.
 Option: FRONT/REAR Default: FRONT
 **Caution: When moving the Head Carriage by hand, pay attention to the Cap height and Wiper position to avoid clashing. Also, when moving the Cap and Wiper, pay attention to the Carriages, especially the Head Carriage.

This is for adjusting and checking the height of the cap. Refer to [4-8 CAP HEIGHT ADJUSTMENT].

This is to confirm that the capping is done properly within the operation range.