


- 21** From the menu (NOT from the service menu), select [INK CONTROL] > [HEAD REPLACE], and press the ENTER key.

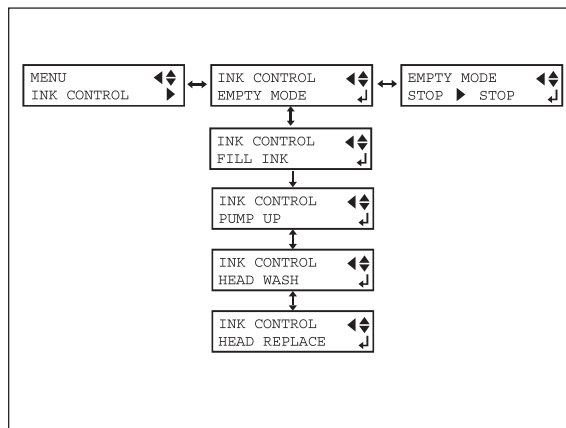

- 22** Enter the SERVICE MODE and perform the following adjustments.

1. THERMISTER CHECK
2. HEAD ALIGNMENT
3. HEAD INFORMATION CLEAR
4. CAP HEIGHT CHECK
5. TOOL / CROP MARK SENSOR POSITION

HOW TO CLEAR THE HEAD INFORMATION

After THERMISTER CHECK and HEAD ALIGNMENT, clear the HEAD INFORMATION from the SERVICE MENU > HISTORY MENU > HEAD GROUP.

When you replaced the left Head, select [CLEAR H1] and press the ENTER key.

When you replaced the right Head, [CLEAR H2] and press the ENTER key.

