



Installing large horizontal wall graphics


1. Cut 2 strips in centre of panel through backing paper only using Olfa Top Sheet Cutter TS-1 - do not peel for now. If liner wants to lift up it can be taped until ready to install. Ideally this is done on a flat, smooth workbench prior to install.

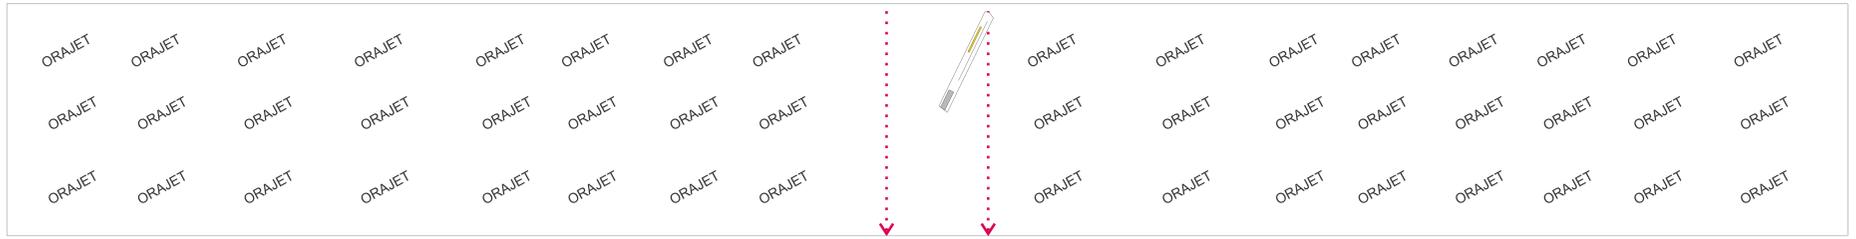


2 Once install location is inspected and prepped, paste up graphic in place. Create a tape hinge on the right side of the center using 2" painter's tape. Use 2 layers to reinforce if necessary. Other strips of tape can be used to ensure proper alignment/registration

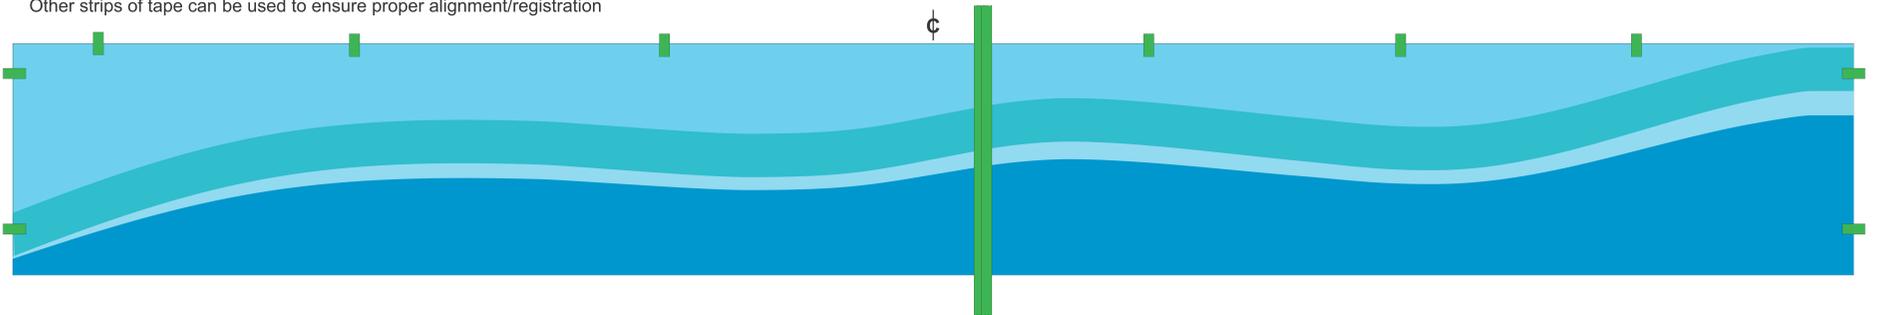

3. Tear the tape along the left side leaving half of the strip on the wall, and the other half on the graphic. Roll the graphic (print side in, unless premasked) until you reach your tape hinge and your pre-cut strip is exposed

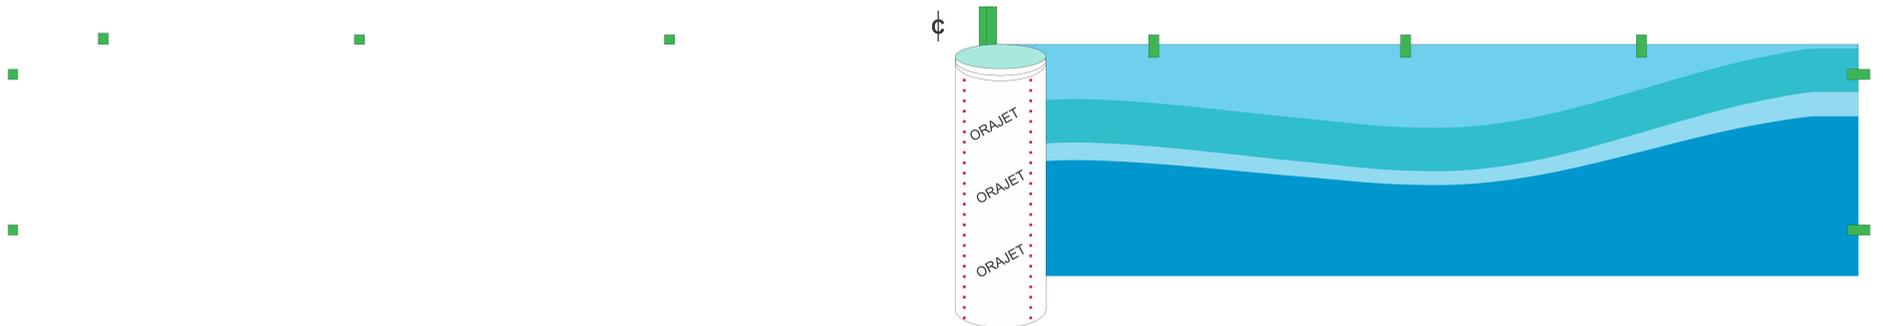

4. Peel back pre-cut strip of backing paper and squeegee this area to tack the panel to the wall/surface. Once tacked, begin peeling the liner and working towards the left side of the graphic using smooth, controlled, overlapping squeegee strokes. Keep the graphic rolled and hold with even (light) tension to control stretching or walking. Check registration marks as you go to ensure the panel is not skewed. Continue until 1st half is complete.

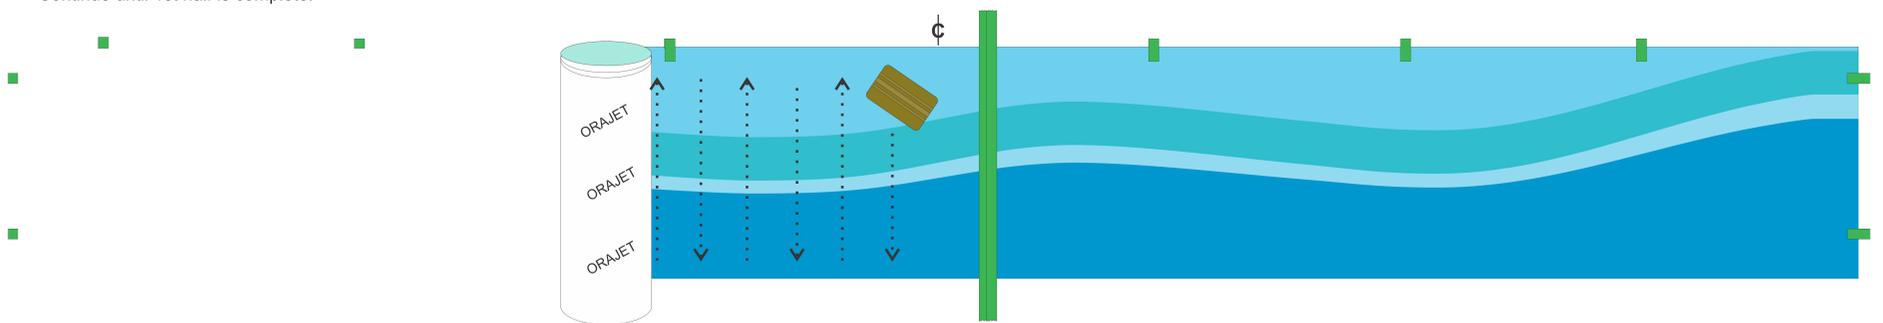

5. Repeat same process for 2nd half until graphic is completely applied. Remove remaining tape strips and wipe down graphic for finger prints/marks if required. If any surface scratches are present (applicable only to lustre or gloss laminates) they can be removed by carefully applying heat with a heat gun or handheld torch. Do not apply too much heat or get too close as it will burn the laminate. Use caution when using heat guns or torches and ensure you are permitted to do so at install location.

