

THE RMO TROLLEY!

How to use it?

(Tested on Arizona 350-480-550 RMOs)

1. Put out both of bars to the bumpers. (Free the bars from the drive motors)
2. Prepare the new roll, and put it into the Trolley (print side-in/out is important)



3. Move the trolley close to the RMO unit, and take the lower bar left side to the trolley as below.




4. Now, put the bar opposite side to the trolley




5. Now, you can change the bar into the new Roll, like below




6. Remove the roll and move the new roll into the proper place

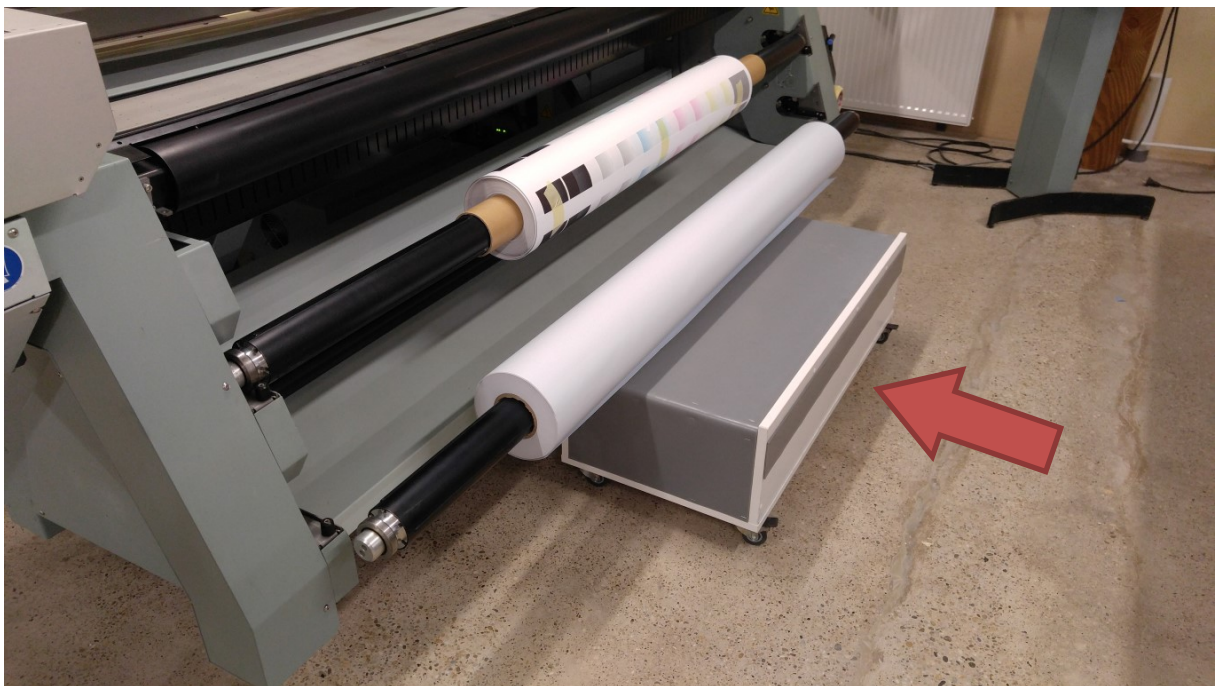

7. Place the new roll one side into the RMO

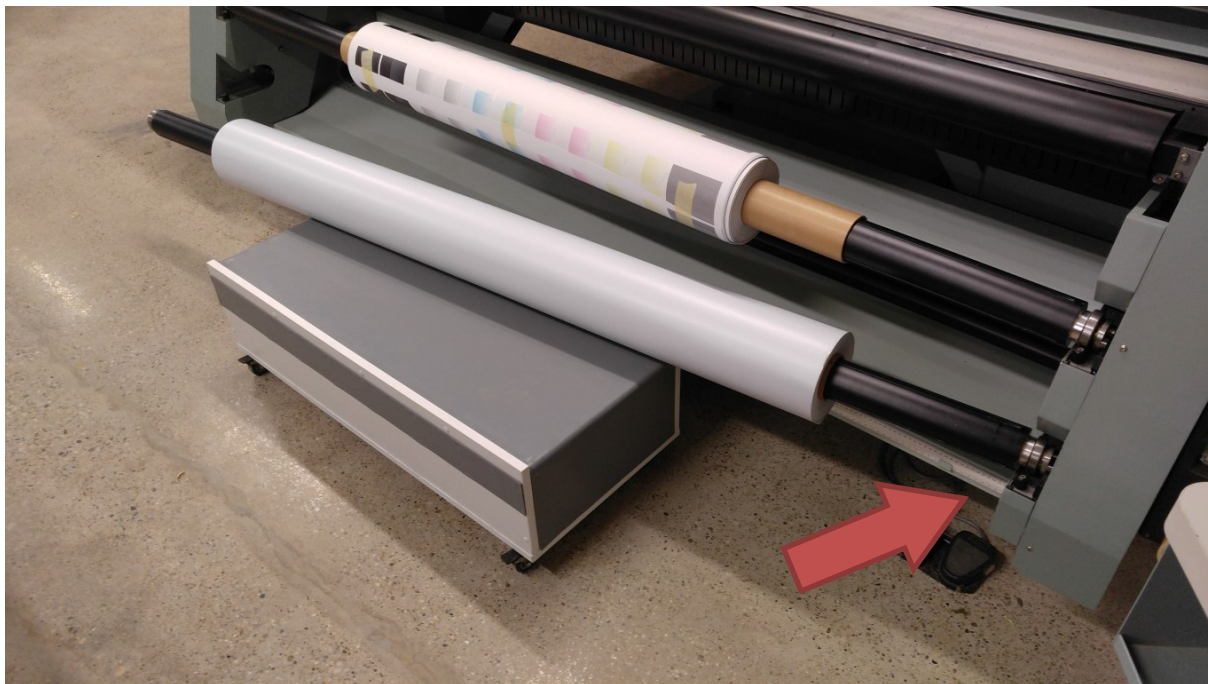

8. And finally the other end too...

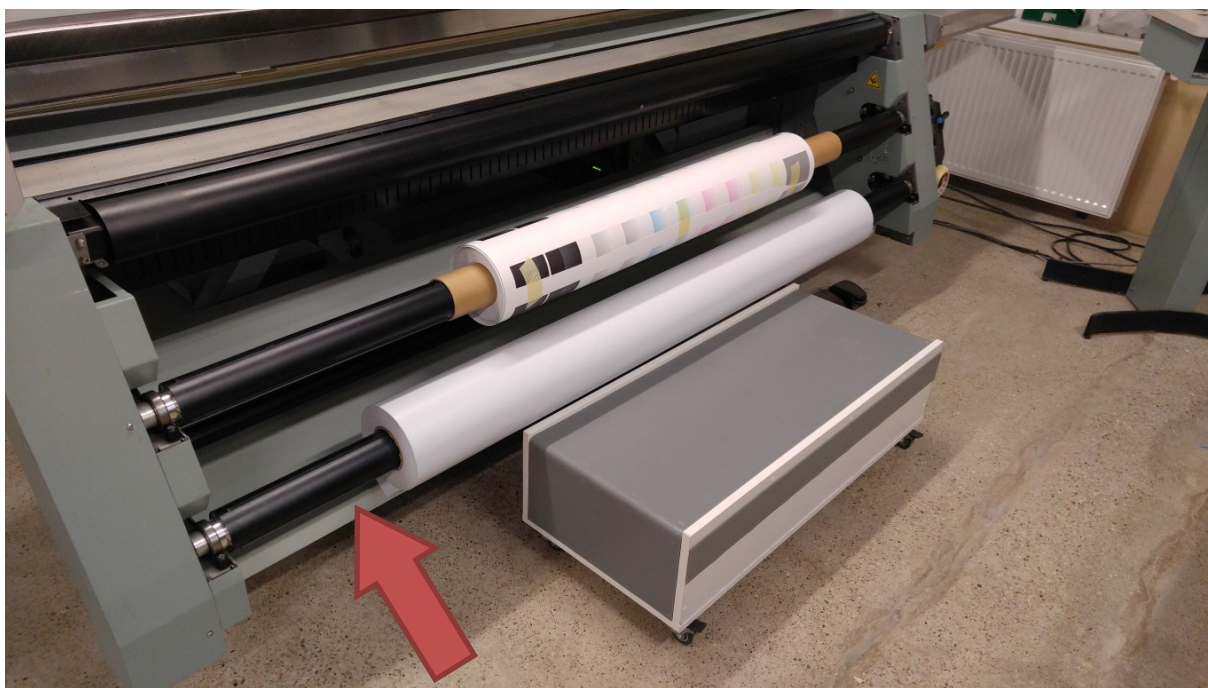

9. That's all! But what if I need to change the upper roll? Do the same steps, as before. Check below:








Both Rolls changed! ☺

Here is the drawing of the unit:

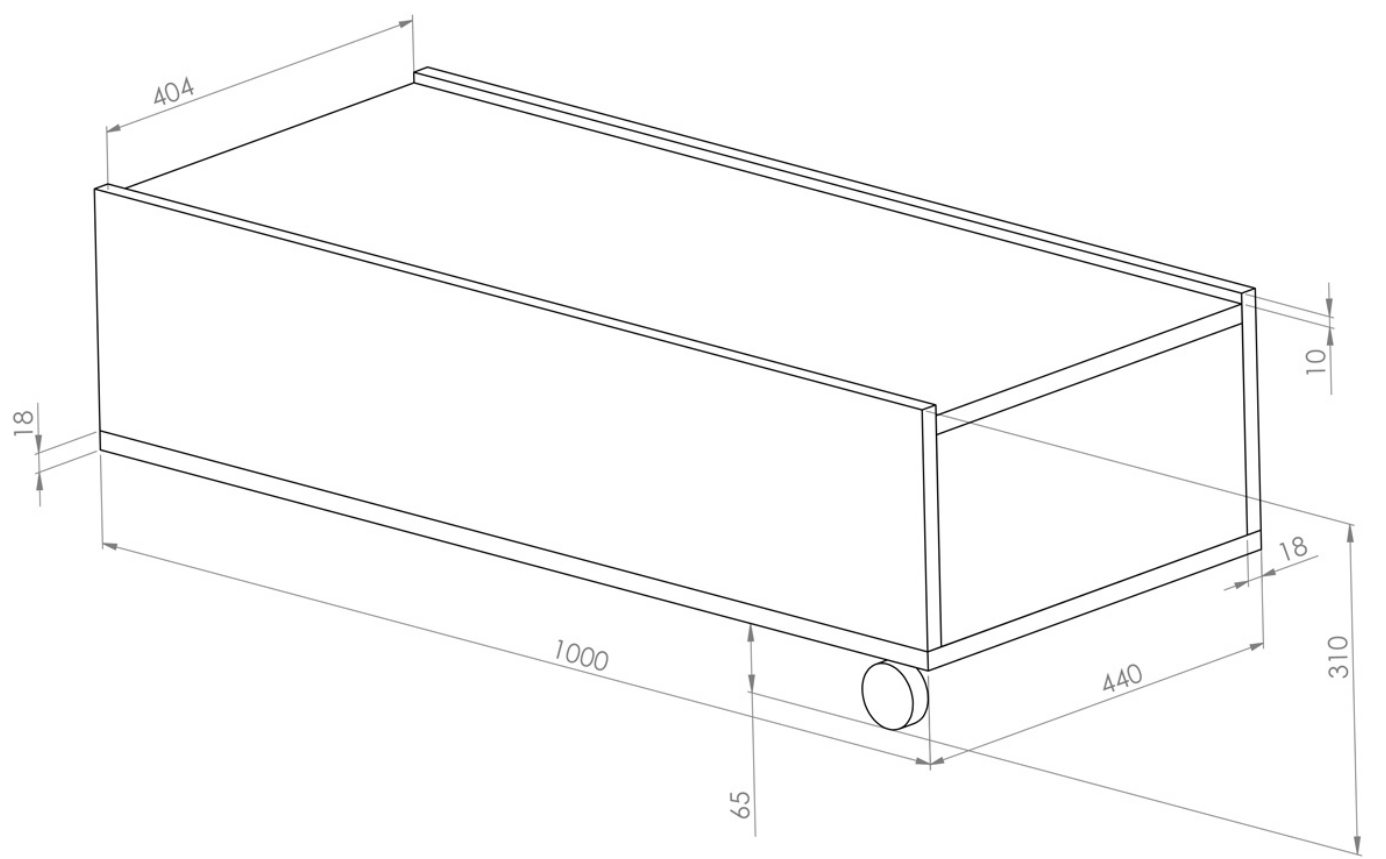

THank you for read this!

GregK

gk@northcontrol.hu